
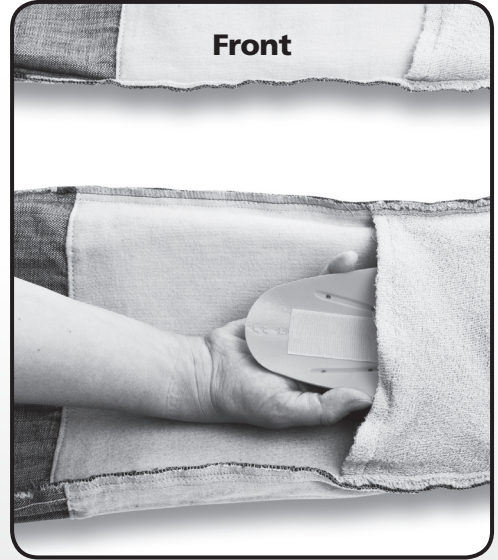


How to fit D3O® Impact Protection Hip and Knee Armour to Kyrano-UK C6 and G8 Jeans

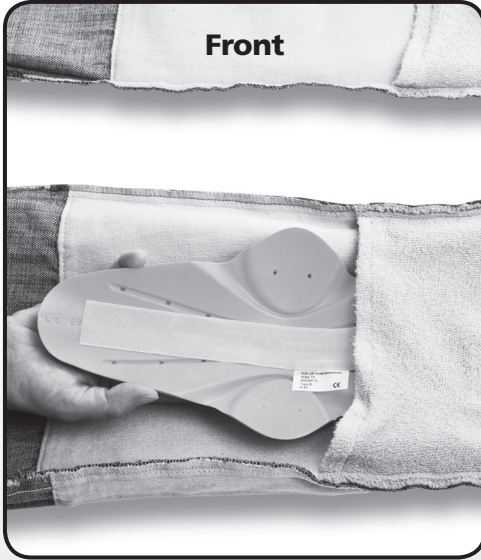

Knee Armour Insertion (Above)

First turn the jean inside out. Simply slide the knee armour up into the knitted K-tech knee panel and velcro into place.

The knee armour can be adjusted up and down using the velcro into the correct position.

This method gives good adjustment of the armour and when turned back through the armour is hidden inside the para-aramid panel.

Hip Armour Insertion (Left)

Slide the armour into the hip pocket.